

Features keys	
Mute and interphony.	
Hands-free, handset or headset volume. Adjust the brightness (8078s, 8068s, 8058s). Adjust contrast (8028s, 8018).	
Audio services (hands-free, handset or headset).	
Hold: the call is placed on hold. Transfer: transfer the call to another number.	
Redial key: to access the 'Redial' feature. For the 8018 DeskPhone, the redial key is associated with the Off-hook key when the phone is in idle state:	
Quick access to user local menu (long press). Used to obtain information on functions of the 'menu' page and to program key of the 'perso' page (short press). Not available on 8018/8008 DeskPhone.	
Messaging key to access various mail services. This key is lit when you have received a new voicemail, text message or callback request.	
Hands-free key To make or answer a call without lifting the handset.	
END key To terminate a call.	

Bluetooth® wireless handset (Compatible Bluetooth® deskphone)	
Off-hook/On-hook.	
Volume/Mute: <ul style="list-style-type: none"> Short successive presses to change the handset volume level (3 levels). Long press to ensure your caller no longer hears you. 	

Welcome screens	
<p>You can access all of your phone's features from these screens. The default display has three pages that you can access by pressing to the page tabs at the top of the screen. The selected page is highlighted.</p> <ul style="list-style-type: none"> Menu page Contains all functions and applications accessible via the keys associated with the words on the screen. Perso page Contains call line keys (allowing supervision of calls) and programmable call keys. Info page Contains information on the telephone and the status of its functions: name, telephone number, number of messages, activation of transfer function, appointment reminder, etc. 	

	<p>Manage your call forwarding by pressing the forward icon.</p> <ul style="list-style-type: none"> Stationary arrow: No forwarding activated. Blinking or rotating arrow according to the skin: Forwarding activated.
--	--

Touchscreen navigation (8078s/8078s BT Premium DeskPhone)	
	Select a page by pressing the corresponding tab on the screen. The selected page is highlighted. Make your selection by pressing the label on the screen.
	Scroll through a list (features, call log, contact, ...) by pressing the up and down arrow on the screen, or the up-down navigator keys.
	Use the 'OK' softkey to validate your choices and options while programming or configuring.



Abilene: 325.690.9500
 El Paso: 915.533.2400
 Midland: 432.520.3481

www.telecomunlimited.com

	Use the 'Back/Exit' icon to go back to the previous step.
	Use the 'Setting' icon for quick access to the user local menu.
	Use the 'Bluetooth®' icon to open Bluetooth® settings.

Navigation keys	
	<ul style="list-style-type: none"> OK key: Use this key to validate your choices and options while programming or configuring. Left-right navigator: Used to move from one page to another and display information about current calls (call in progress, calls on hold, incoming call). Up-down navigator: Used to scroll through the content of a page.
	<ul style="list-style-type: none"> Use this key to go back to the previous step. Use this key to go back to the homepage (long press).










Status icons/ Call icons			
	Silent mode.		Incoming call icon.
	Telephone locked.		Call in progress icon.
	Headset connected/Handsfree connected		Call holding icon.
	Appointment programmed.		Your contact ended the conversation.









Magnetic alphabetic keyboard	User local menu
<p>Cursor moving keys (left, right, up and down).</p>	<p> or (long press): Open the user local menu. The user local menu depends on the type of the set. The user local menu lets you:</p> <ul style="list-style-type: none"> Configuring the audio jack of your telephone. Adjusting the brightness of the deskphone. Activate/deactivate the logo on back shell. Installing a Bluetooth® Wireless accessory. Display all paired Bluetooth® devices. Removing a Bluetooth® accessory (headset, handset, etc.). Use your DeskPhone as a Bluetooth® audio accessory. Change the theme (skin) of your phone.
<p>Caps lock: to write text in capital letters.</p>	
<p>Alt key: to access specific and punctuation characters.</p>	
<p>Enter key: to validate edited text.</p>	
<p>Backspace key: to delete one character in an edit box.</p>	




Alpha-numeric keyboard (8018/8008 DeskPhone)

- Switch the keyboard to the alphabetic mode by selecting the associated preprogrammed key. When activated, the LED corresponding to the key remains lit up.
- Enter alphabetic characters.
The number pad keys have letters that you can display by successive presses. The number is the last character in the series. Some special characters can be displayed by successively pressing the key:

	% \$ / ~ & () [] = *
	@ #
	space - _ 1
	+ . , ; : / ? ! < > 0

Call Dial the number directly or dial the number after pressing a line key (an off-hook key phone or Bluetooth® handset, hands-free key).	
Call by name (Company directory) Enter the first letters of contact's name and follow the on-screen instructions.	
Answer a call Take the handset off the hook, use an off-hook key (phone or Bluetooth® handset), use the hands-free key, or press the incoming call icon.	
Ignore call / End the call.	
Redial Long press to access the list of the last 10 dialed numbers. Short press to call the last dialed number.	
Make a call-back request to a busy number <i>Callback</i>	
Placing a call on hold (hold)	
Mute	
Interphony The phone automatically answers the call. Before the line is taken, you hear a succession of specific beeps.	
Making a second call during a conversation <i>New call</i>	 
Answering a second call during a conversation. Select the incoming call icon.	
Switching between calls (Broker call) Press the key associated with the call on hold	

Cancel your second call You automatically recover the first call.	
Transferring a call You are in conversation with one contact. <i>Press Transfer</i> Call a second contact. <i>Press Transfer</i>	
Conference Call the first contact. Hit Conference. Call the second contact. Press <i>Conference (Conf)</i> .	
Make calls via your programmed call keys Press the desired programmed call key.	Perso
Programming direct call keys Press the 'I' key or <i>Settings > Keys</i> Select the key to program. Enter the name and number to associate to the key.	Menu 
Modify the programmed key Press the 'I' key or <i>Settings > Keys</i> Press the programmed key to be modified. Follow the on-screen instructions.	Menu 
Erase a programmed key Press the 'I' key or <i>Settings > Keys</i> Select the key to be erased. Follow the on-screen instructions.	Menu 
Customizing your voice greeting <i>Settings > Mailbox</i> You can listen to the greeting, customize the greeting and set the default greeting.	Menu
Consulting your voice mailbox Default Password: 000852	
Diverting calls to your voice mailbox Select the forward icon. <i>Immediate VM</i> Select the type of call forwarding required.	
Cancel forward Select the forward icon. <i>Cancel fwd.</i>	

Do not disturb Select the forward icon. <i>DoNotDisturb (DND)</i>	
Send text messages <i>Message</i> <i>SendTxtMsg</i> Enter the destination number. Select the type of message to send (fixed Msg, New Msg,...).	
Read text messages <i>Message</i> <i>ReadTxtMsg</i>	
Information about the phone	Info
Lock/unlock the phone <i>Lock</i>	Menu
Adjust audio volume While using the handset or speaker	
Select the language of your choice <i>Settings > Options > Language</i>	Menu
Choose the tune <i>Settings > Set > Ringing</i> Adjust the ring via the following menus: Melody, Silent, Beeps, Volume, etc.	Menu
Adjust the brightness of the set Press the - or + while phone is idle	
Modify the password for your phone set <i>Settings > Options > Password</i>	Menu
Background <i>Settings > Set > Local Menu > Skin</i> Select a Skin.	Menu



Abilene: 325.690.9500
El Paso: 915.533.2400
Midland: 432.520.3481

www.telecomunlimited.com